



USER GUIDE



User guide for wall mounted thermostat of heating-cooling

- The stages of heating and cooling can be adjusted by pressing the fan symbol located at the right top corner of the display.
- 0 - turn off
- Stages 1-2-3 - indicate the strength of air blow
AUTOMATIC - operating mode
- The device turns off in automatic mode as soon as the desired temperature is reached, then it will start again automatically as required by the temperature.
- The signs “+” and “-” can be used for adjusting the temperature
- The room temperature can be adjusted in steps of maximum 2.5 °C,
- If a symbol depicting a human figure appears at the upper left corner, then the device is under maintenance, it does not operate.



Guide for using the remote controller of the skylight at 4th floor

- Press the house symbol on the display to operate the device.
- The following functions can be selected by sweeping on the touch screen:
ABLAK1 (Window 1): open window
KÜLSŐ HŐVÉDŐ ROLÓ1 (External heat protecting shutter 1): Filters up to 76 % of the irradiated heat, the room temperature could be lowered by up to 5 °C.
ÁRNYÉKOLÓ1 (Shade 1): Light shade
- The figures below the symbols indicate open-close, as well as opening and closing the shutter.
- Switching off takes place automatically, the display becomes dark.

Please contact the reception if you need further information or help.